

Operating Instructions for RSA and TLA Card Readers

1. Connect the appropriate reader cable to the PC and card reader
2. Open up a connection program such as HyperTerminal
3. Set up as 9600 baud rate, 8 bit, no parity, 2 stop bits
4. Insert encoded card to read and display data

Operating Instructions for Model PI70-120-TLA

1. Connect the appropriate reader cable to the PC and card reader
2. Open up a connection program such as HyperTerminal
3. Set up as 9600 baud rate, 7 bit, even parity, 2 stop bits
4. Insert encoded card to read and display data